


# Hobb Nail Assembly Instructions

## Parts List


- (1) Rod
- (1) Nut
- (1) Spider
- (1) Column
- (1) Bottom

## Tools List

- 7/16" Socket Wrench

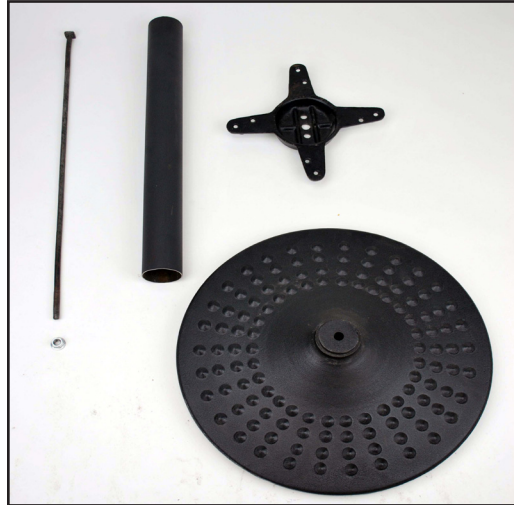

1.

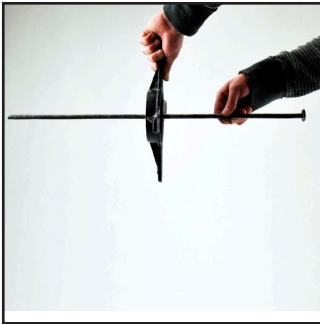

Insert rod through spider, threaded end first.

2.




Flip spider upside down with threaded end of rod sticking up.

3.



Slide column over rod

4.

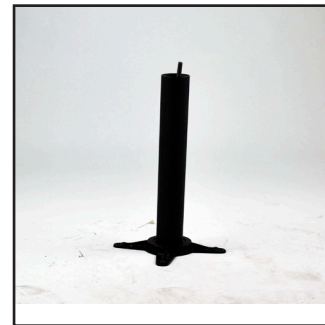

Slide column over rod so threaded end of rod is exposed



# Hobb Nail Assembly Instructions



Place threaded end of rod through bottom of base.



Make sure spider, column, and bottom are aligned; hand tighten bolt to exposed threaded rod



Use wrench to completely tighten bolt to rod.



Flip base over for completed product

