



Franz Table Base Assembly Instructions

Parts List


- (1) Nut
- (1) Rod
- (1) Spider
- (1) Column
- (1) Base
- (5) Glides

Tools List

- 7/16" Socket Wrench



1.

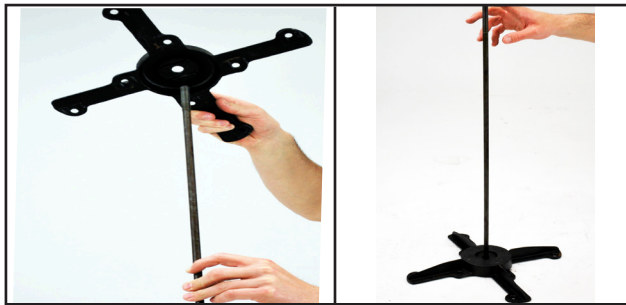

Flip spider over and insert rod.

2.



Flip column over; then guide rod through column.

3.



Flip base over and place on top of column. Make sure threaded end of rod is exposed through bottom of base.


4.



Screw nut on exposed end of threaded rod. Completely tighten with socket wrench.



5.

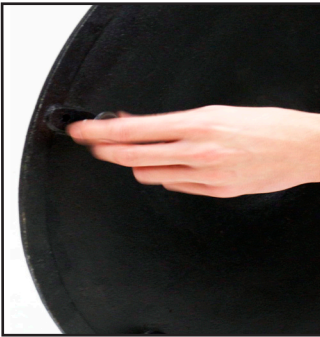

Screw glides into bottom of base. Once completed flip base over for completed project.

